

Sheet1

Step	Check
Remove rear luggage tray (better access if you sit in engine bay)	
Lift car, put rear chassis arms on axle stands	
Optional – remove rear deck lid (better access)	
Disconnect battery terminals	
Disconnect Fuel line from tank to pump (stop line/lift above tank level to prevent spillage)	
Remove Carburettors if dropping engine down/lifting body.	
Disconnect Oil Pressure line	
Disconnect Temperature line	
Disconnect Ignition wiring to distributor	
Disconnect Starter Motor connections	
Disconnect Alternator connections	
Disconnect Earth Straps	
Remove Exhaust system	
Disconnect Throttle cable	
Disconnect Heater cable	
Disconnect Choke cable	
Disconnect gear linkage – Engine/clutch support bracket	
Disconnect clutch cable at bellhousing & engine mounting bracket	
Disconnect gear linkage – Rear of Gearbox (352/365?)	
Disconnect Speedometer cable	
Disconnect Reverse lamp wiring on Gearbox	
Remove Pins from Driveshafts, release driveshafts	
Release Lower Links at Gearbox Mount	
Drain coolant	
Disconnect Heater Hoses at engine	
Disconnect Coolant hoses at engine (Thermostat/Front cover/Header tank feed)	
Support engine/transmission assembly	
Remove rear gearbox mounts	
Remove engine block mounting brackets with engine mounts	
Optional	
Drain engine oil	
Drain Transmission oil	