

## General

All arrows go from a hard edge on the body to the nearest edge of the pin stripe.

Limitations of Powerpoint or pixel size does not allow all arrows to be placed accurately

**Pin stripes are 3/16<sup>th</sup> inch wide.**




Lotus applied the pin stripes by hand so I doubt all TCS's are exactly the same.

Edges of bodywork are not always straight or consistent, so this is my "best shot"


# 74 TCS Pin Stripes




# 74 TCS Stripes front right

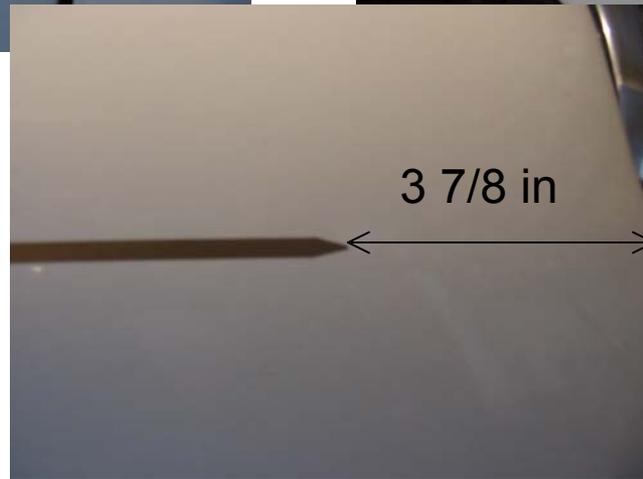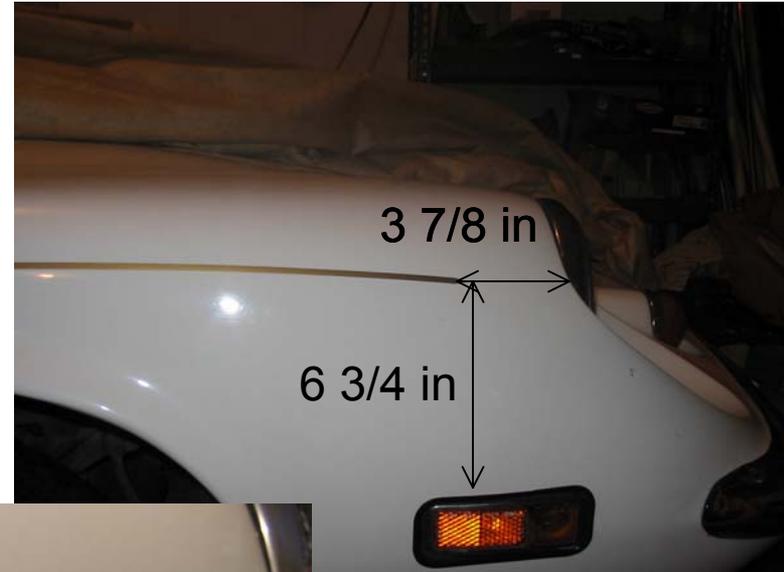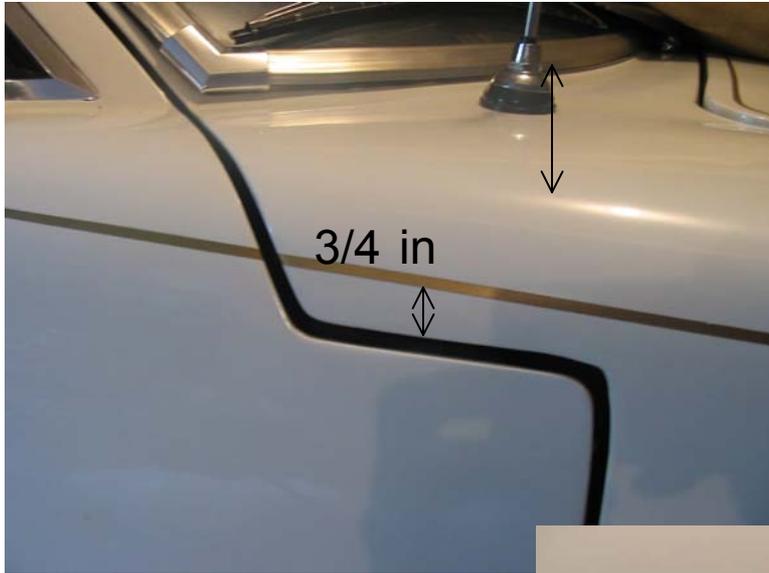



# TCS Stripes side/rear right

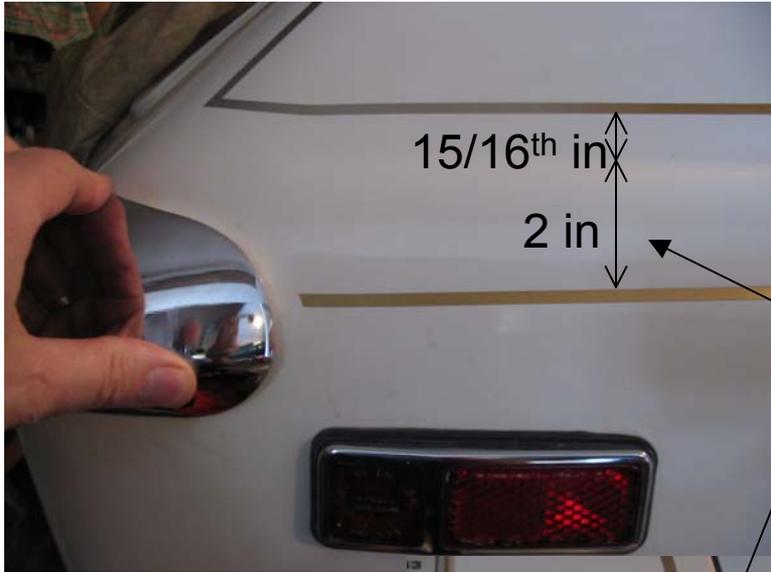



2 in dimension  
measure around  
the curve of the  
bodywork

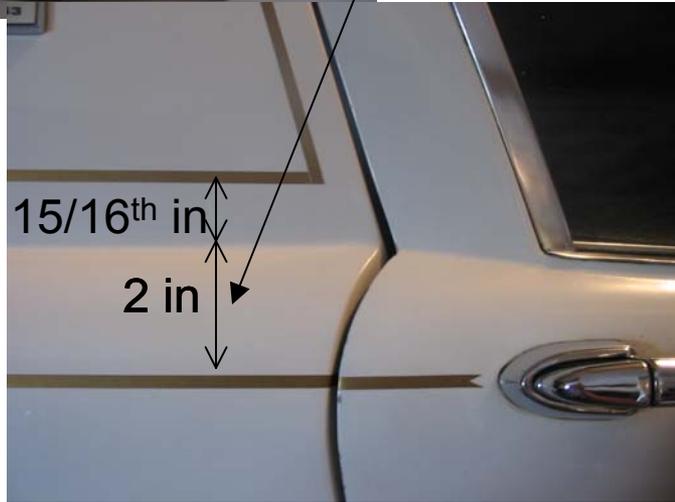




# TCS Stripes rear right

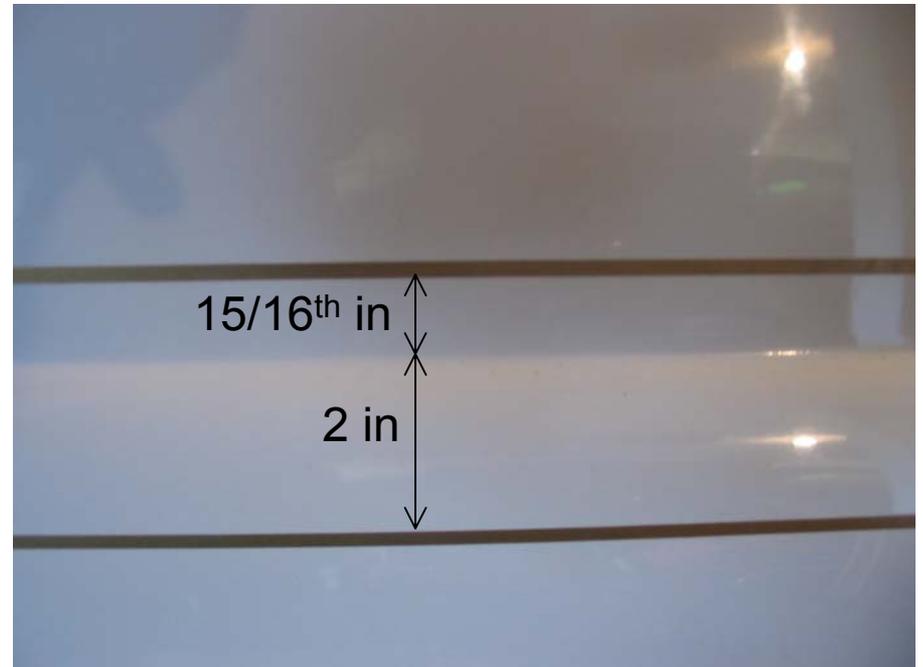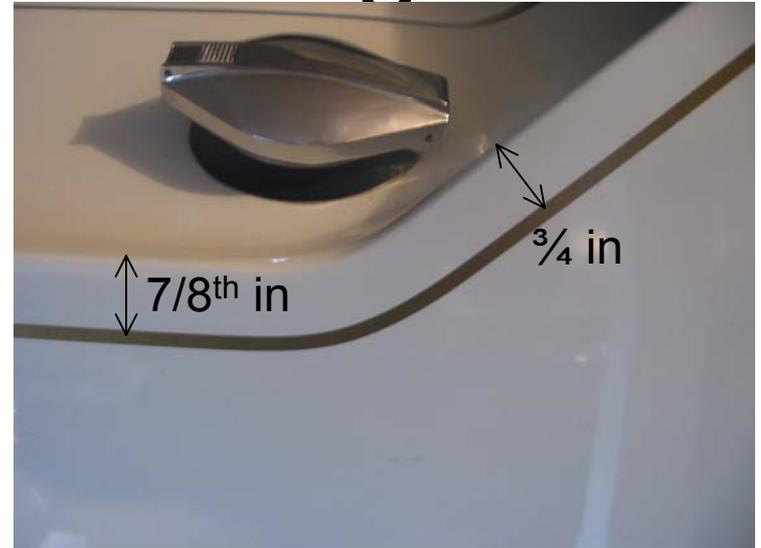



# TCS Stripes side/rear right

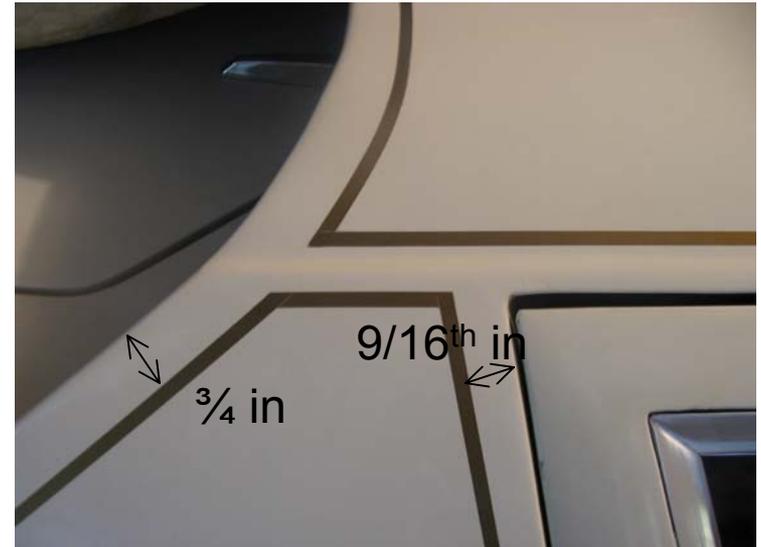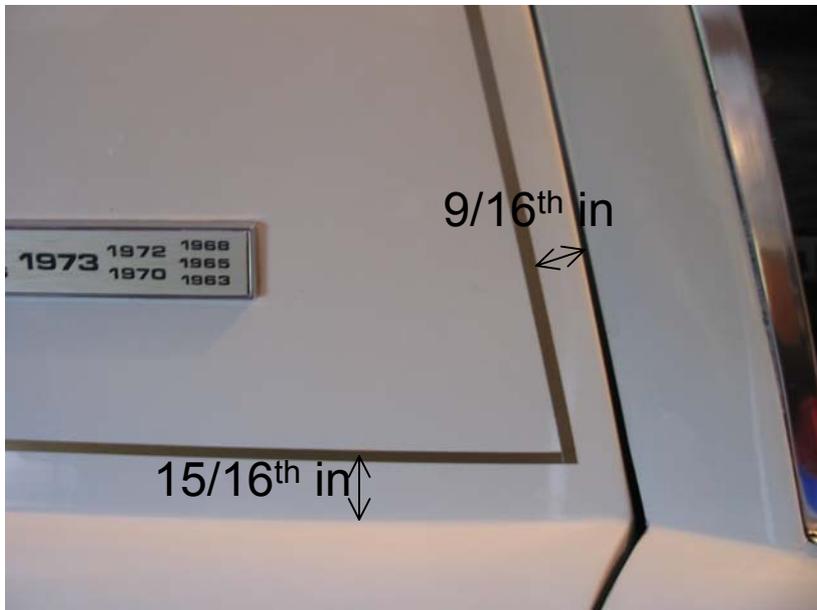




# TCS Stripes front right

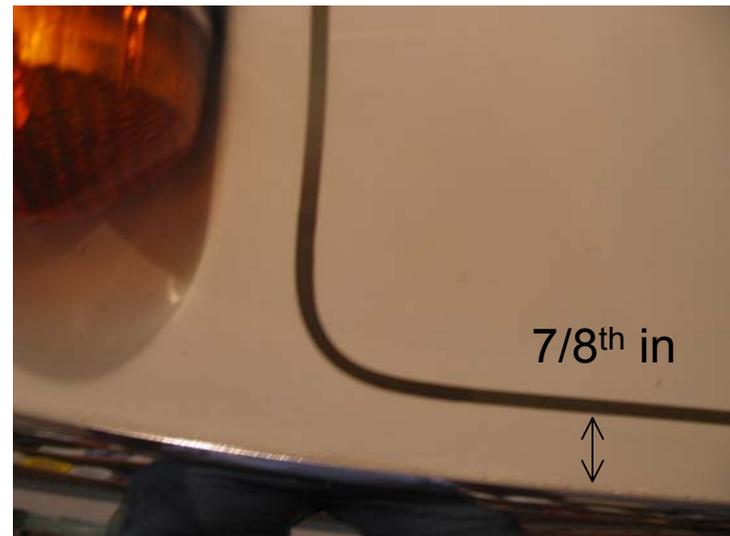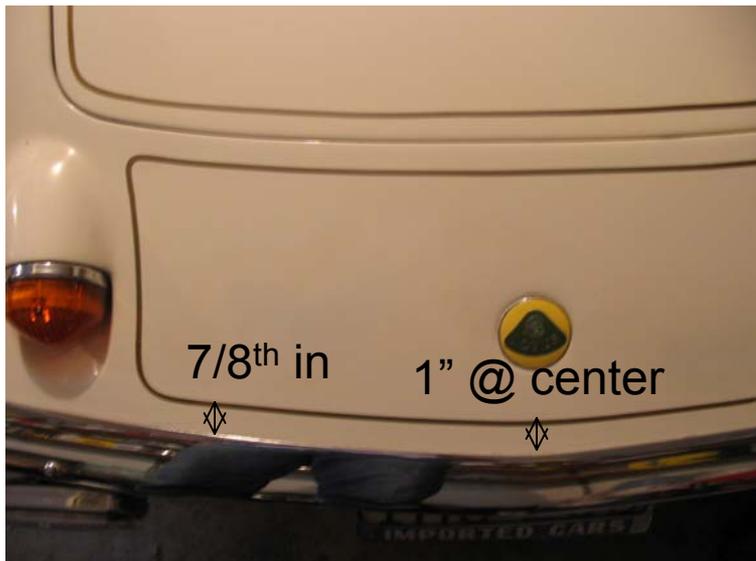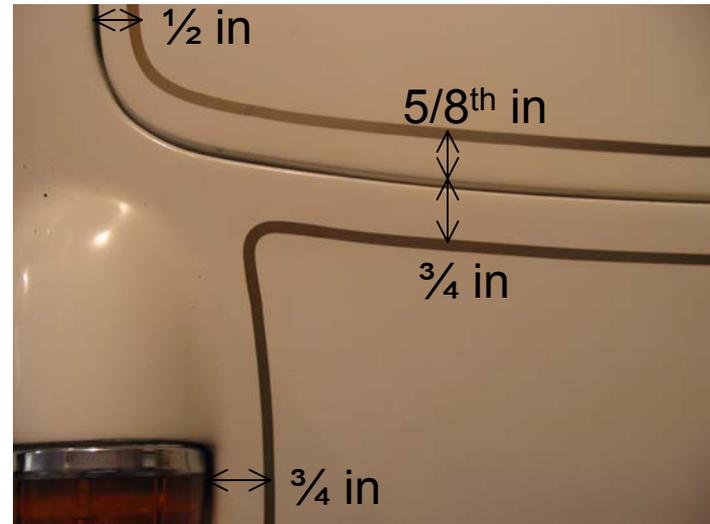

# TCS Stripes front right/hood

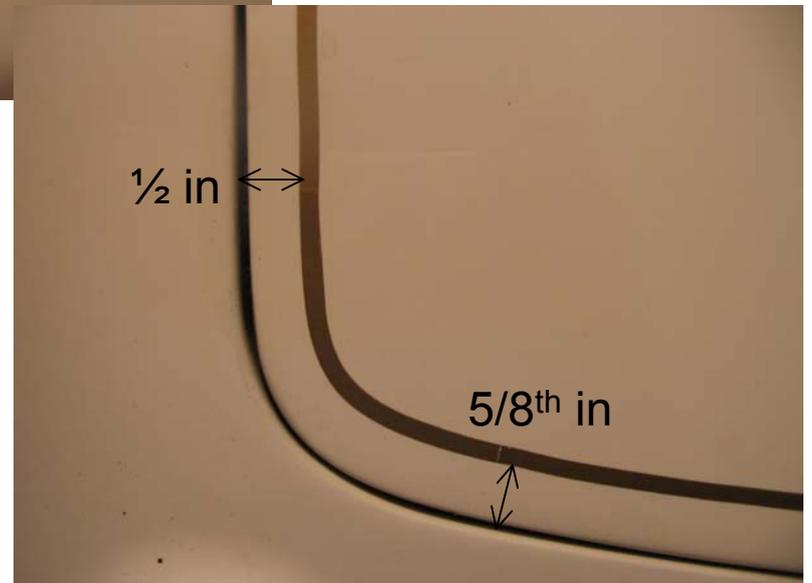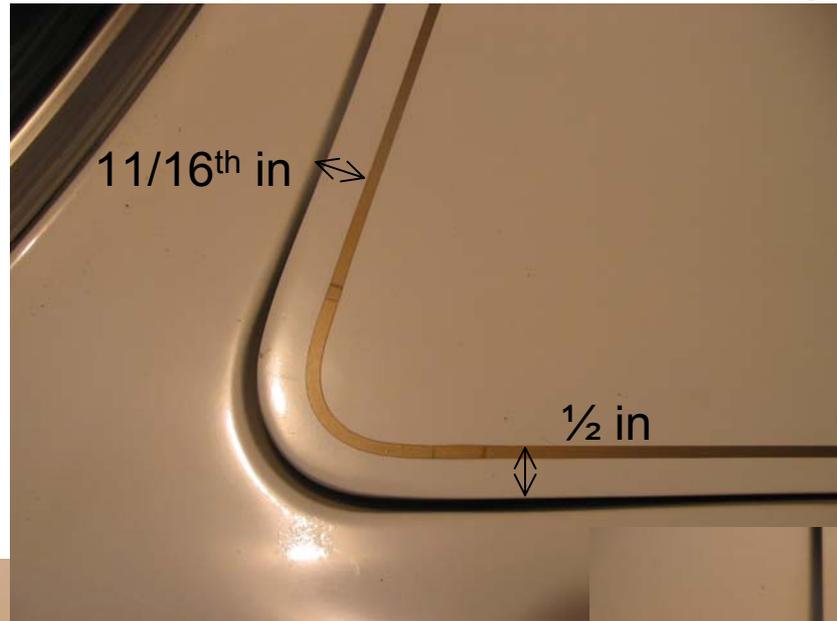

# TCS Stripes roof area

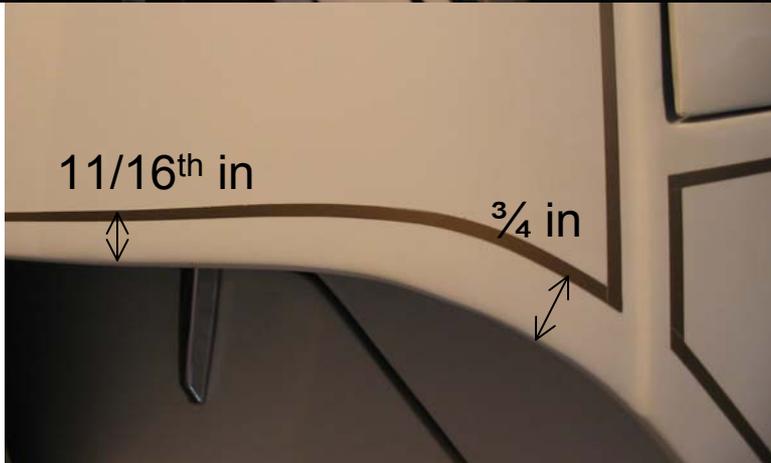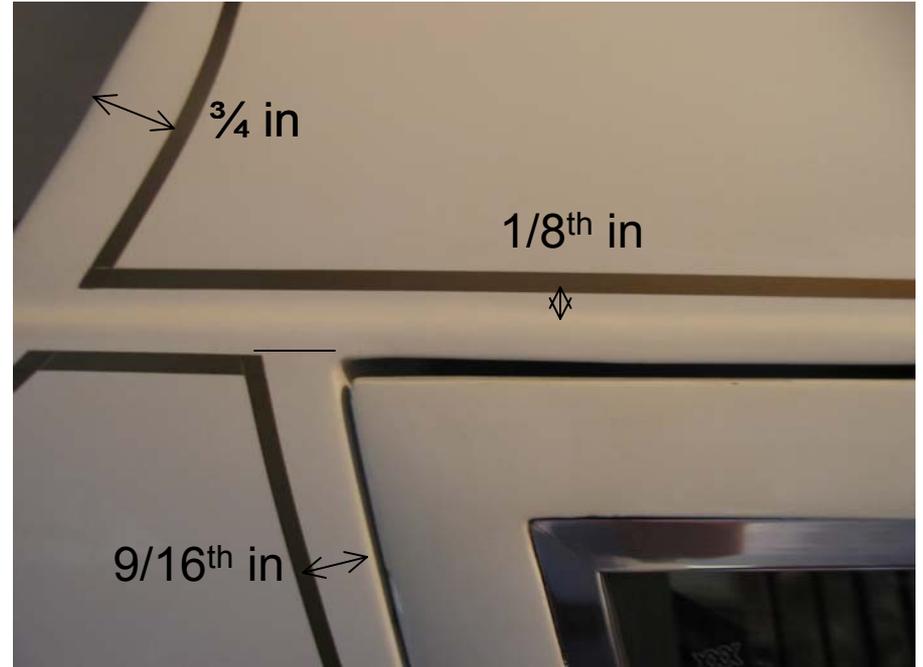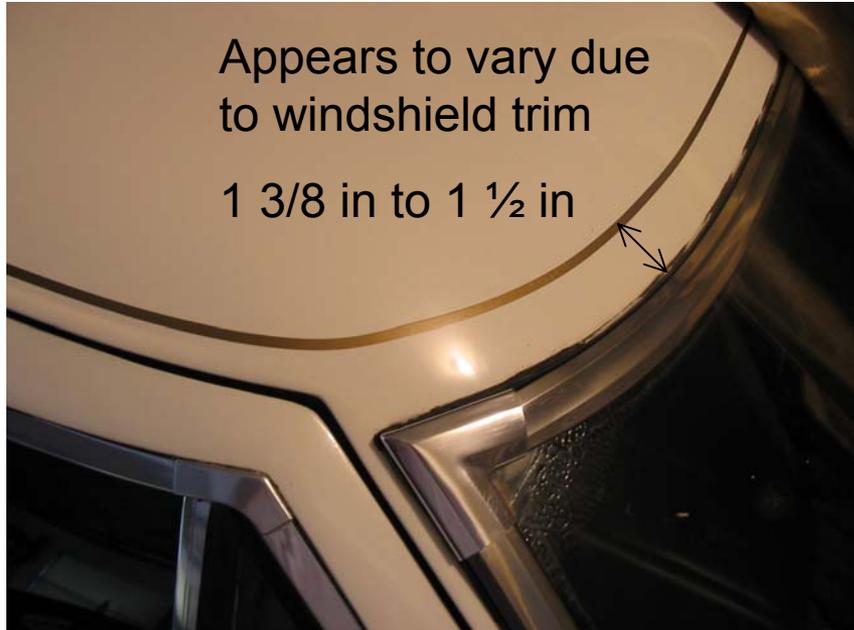

# TCS Stripes rear engine cover

